

inReach Support Center

Portal > Knowledgebase > inReach Devices > inReach SE+ > How-To > Cancelling an SOS using inReach SE+ / Explorer+

Cancelling an SOS using inReach SE+ / Explorer+

Administrator - 2017-03-09 - 0 Comments - in How-To

During an emergency, you can contact the GEOS International Emergency Rescue Coordination Center (IERCC) to request help. Pressing the SOS key sends a message to the rescue coordination center, and they notify the appropriate emergency responders of your situation. You can communicate with the rescue coordination center during your emergency while you wait for help to arrive. You should only use the SOS function in a real emergency situation.

This article explains how to cancel an SOS rescue.

If you no longer need assistance, you can cancel an SOS rescue after it is sent to the emergency response service.

1. Lift the protective cap ❶ from the **SOS** key ❷.



2. Select **Cancel** and press ✓

NOTE: Your device transmits the cancellation request. When you receive a confirmation message from the emergency response service, the device returns to normal operation.