

inReach Support Center

Portal > Knowledgebase > inReach Devices > inReach SE+ > How-To > Changing Map Settings on inReach SE+ / Explorer+

Changing Map Settings on inReach SE+ / Explorer+

Administrator - 2017-03-10 - 0 Comments - in How-To

The Map Settings menu on your inReach allows you personalize the behavior and look of the map.

To change your Map Settings:

1. Select **Settings** and press ✓
2. Select **Map** and press ✓
3. Select an option from the list and press ✓

Orientation

Adjusts how the map is shown on the page. The **North Up** option shows north at the top of the page. The **Heading Up** option shows your current direction of travel toward the top of the page.

Scale

Sets the map scale to distance or ratio.

Filter

Sets the amount of historical information displayed on the map.

Show Messages

Sets messages to appear on the map.

Show Track Points

Sets track points to appear on the map.

Show Track Line

Sets the track line to appear on the map.

Track Line Color

Changes the color of the track line on the map.