

inReach Support Center

Portal > Knowledgebase > inReach Devices > inReach SE+ > How-To > Changing Message Settings on inReach SE+ / Explorer+

Changing Message Settings on inReach SE+ / Explorer+

Administrator - 2017-03-10 - 0 Comments - in How-To

The Messages Settings menu on your inReach allows you change the behavior of how your device interacts with the network and alerts you of new messages.

To change your Messages Settings:

1. Select **Settings** and press ✓
2. Select **Messages** and press ✓
3. Select an option from the list and press ✓

Listen Interval

Sets the frequency at which the device listens for new messages.

Ring Until Read

Sets the device to ring until you read a new message. This feature is helpful if you are in a noisy environment.

Adaptive Mail Check

When this setting is enabled, the device listens more frequently for a reply to a sent message for ten minutes. If the recipient replies quickly, you can receive the reply before the next scheduled listen interval.