

# inReach Support Center

Portal > Knowledgebase > inReach Devices > inReach SE+ > How-To > Changing Sound Settings on inReach SE+ / Explorer+

---

## Changing Sound Settings on inReach SE+ / Explorer+

Administrator - 2017-03-10 - 0 Comments - in How-To

The Sound Settings menu on your inReach allows you set the volume and sounds played for when messages are sent and received as well as when your device is powered off.

To change your Sound Settings:

1. Select **Settings** and press ✓
2. Select **Messages** and press ✓
3. Select an option from the list and press ✓

### **Mute All**

Mutes all device tones.

### **Volume**

Sets the device volume level.

### **Message Received**

Sets the tone that sounds when you receive a message.

### **Message Sent**

Sets the tone that sounds when the you send a message.

### **Critical Alert**

Sets the tone that sounds when the device announces a critical alert.

### **Power Off**

Sets the tone that sounds when you turn off the device.