

inReach Support Center

[Portal](#) > [Knowledgebase](#) > [inReach Devices](#) > [inReach SE+](#) > [How-To](#) > [Changing Time Settings on inReach SE+ / Explorer+](#)

Changing Time Settings on inReach SE+ / Explorer+

Administrator - 2017-03-10 - [0 Comments](#) - in [How-To](#)

The Time Settings menu on your inReach allows you set the time format, time zone, and daylight savings settings of your device.

To change your Time Settings:

1. Select **Settings** and press ✓
2. Select **Messages** and press ✓
3. Select an option from the list and press ✓

Time Format

Sets the device to show time in a 12-hour or 24-hour format.

Zone

Sets the time zone for the device.

Daylight Saving

Sets the device to use daylight saving time