

# inReach Support Center

Portal > Knowledgebase > inReach Devices > inReach SE+ > How-To > Charging the inReach SE+ / Explorer+

---

## Charging the inReach SE+ / Explorer+

Administrator - 2017-03-07 - 0 Comments - in How-To

This article explains how to charge your inReach.

**NOTICE!** To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

**NOTE:** The device does not charge when it is outside the approved temperature range (Charging temperature range: 0° to 45°C (from 32° to 113°F))

1. Lift the weather cap ① .



2. Plug the small end of the power cable into the USB port ② on the device.
3. Plug the other end of the power cable into an appropriate power source.
4. Charge the device completely.