

# inReach Support Center

[Portal](#) > [Knowledgebase](#) > [inReach Devices](#) > [inReach SE+](#) > [How-To](#) > [Deleting a Weather Location using inReach SE+ / Explorer+](#)

## Deleting a Weather Location using inReach SE+ / Explorer+

Administrator - 2018-10-25 - [0 Comments](#) - in [How-To](#)

Your inReach device can send a message to request basic, premium, or marine weather forecasts. You can receive weather forecasts for your current location, a waypoint, or GPS coordinates. Weather forecasts incur data usage charges. For more information, go to: <https://inreach.roadpost.ca/contract-free-inreach-roadpost-plans/>

This article explains how to delete a weather location.

1. Select **Weather** and press ✓
2. Select a location from the list and press ✓
3. Press  and the **Weather** menu will be displayed.
4. Select **Delete** and press ✓
5. Select **Delete** and press ✓ to delete the weather location.