

inReach Support Center

Portal > Knowledgebase > Earthmate App > Android > How-To > Deleting Waypoints on the inReach Explorer, Explore Portal, and Earthmate App

Deleting Waypoints on the inReach Explorer, Explore Portal, and Earthmate App


Administrator - 2017-07-09 - 2 Comments - in How-To



Solution 1: Remove waypoint from device


1. Power on device using the checkmark key.
2. Select "Waypoints" on the device.
3. Select a waypoint.
4. Select "More."
5. Select "Delete."
6. Confirm deletion by selecting "Delete" again.

Solution 2: Remove waypoint from the Explore portal

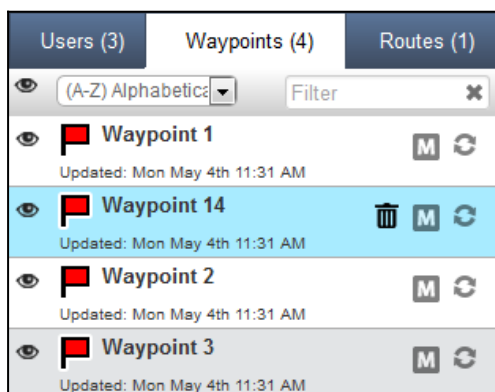
1. Login to inreach.garmin.com.
2. Click on the "Map" tab.
3. Click on the "Waypoints" tab.
4. Click on the waypoint you wish to delete.



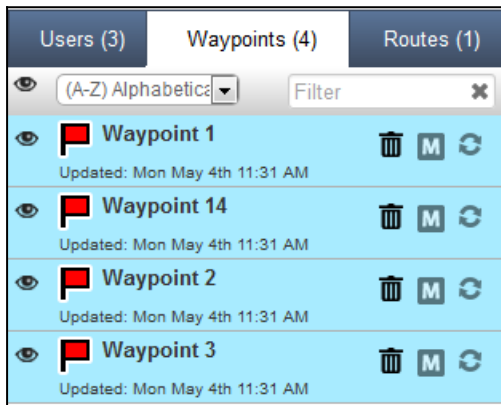

5. A trashcan icon will appear .
6. Click on the trashcan icon to delete the waypoint completely.
7. To delete multiple waypoints at once, hold down the CTRL key on your keyboard and then click on the waypoints you wish to delete. Click on the trashcan  to delete the waypoints.



Solution 3: Remove Waypoints from Earthmate app for Android

1. Open the Earthmate app.
2. Tap on the hamburger button  on the top left hand corner.
3. Tap on "Waypoints."
4. Tap on the waypoint you would like to delete.
5. Tap on the "Delete" button.

Solution 4: Remove Waypoints from Earthmate app for Apple iOS

1. Open the Earthmate app.
2. Tap on "More." 
3. Tap on "Waypoints."
4. Tap on a waypoint.
5. Tap on the upload icon  .
6. Tap on "Delete."