

# inReach Support Center




Portal > Knowledgebase > Earthmate App > Android > How-To > Enable Tracking on the Earthmate app for Android

---

## Enable Tracking on the Earthmate app for Android

Administrator - 2017-07-05 - 0 Comments - in How-To

### Enable Tracking on the Android Earthmate app:

1. Open the Earthmate app.
2. Tap on the settings icon , then tap on **Settings**.
3. Tap on **Tracking**.
4. Tap on **Send Interval** to select how often the inReach will send to the Explore portal.
5. Tap on the **Log Interval** if you want to log your position data to the inReach device without transmitting it (This will only work for inReach Explorer, inReach Explorer+ and inReach SE+ devices).
6. Press on the Android back button .
7. Tap on the menu icon .
8. Tap on **Tracking**.
9. Tap on **Interval**.
10. Tap on the desired interval.
11. Tap on **Start Tracking**.
12. Tracking will continue until you tap on **Stop Tracking**.