

inReach Support Center

Portal > Knowledgebase > inReach Devices > inReach SE+ > How-To > Navigating a Route using inReach SE+ / Explorer+

Navigating a Route using inReach SE+ / Explorer+

Administrator - 2018-10-25 - 0 Comments - in How-To

A route is a sequence of points or locations that leads you to your final destination. You can create and save routes at inreach.garmin.com. After a route has been created you will need to sync your inReach device.

This article explains how to navigate a route and stop navigating a route.

Navigating a Route

1. Select **Routes** and press ✓
2. Choose a route from the list and press ✓
3. Select **Navigate** and press ✓ to begin navigating to your destination.

TIP: Use the **Map** and **Compass** to assist with navigating to your destination.

Stop Navigating a Route

1. Select **Routes** and press ✓
2. Select **Stop Navigating** and press ✓
3. Select **Stop Nav.** and press ✓ to stop navigating.

Related Pages

- [Navigating using the Compass with inReach SE+ / Explorer+](#)