

# inReach Support Center

Portal > Knowledgebase > inReach Devices > inReach SE+ > How-To > Re-Arranging Icons on the inReach SE+ / Explorer+


## Re-Arranging Icons on the inReach SE+ / Explorer+


Administrator - 2017-03-07 - 0 Comments - in How-To


The ability to re-arrange icons on the home screen is a new feature that was introduced in firmware version 3.4. You can verify your firmware version by navigating to **Settings > About This Device** on your inReach Device. If you need to update your Firmware, you can do so by performing a sync.

To re-arrange the icons:

1. On the home screen, press on the  button and select **Reorder Icons**.

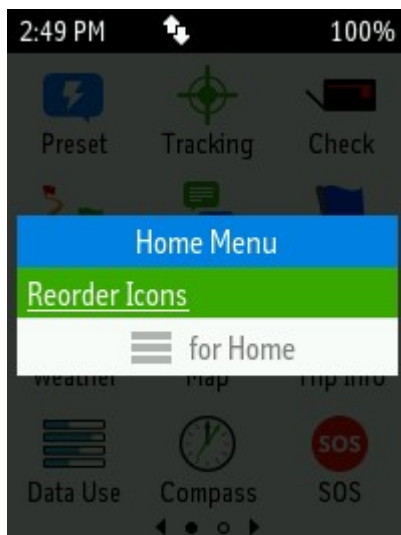

2. Select the icon you wish to move and press the  button.

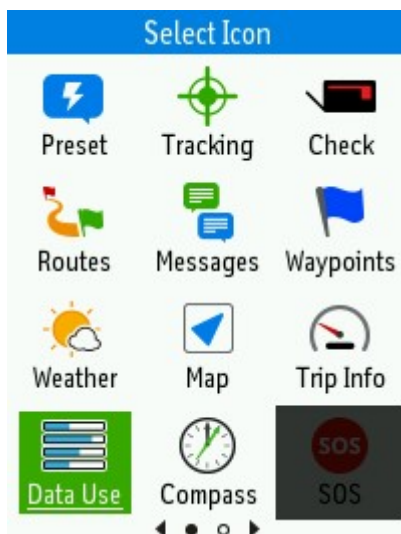

3. Use the directional keypad to move the icon on the screen and use the  button to place it.



4. To reset to defaults, press on the  button and select **Reset Icons**.

