

inReach Support Center



Portal > Knowledgebase > inReach Devices > inReach SE+ > How-To > Stop Navigating using the Compass with inReach SE+ / Explorer+

Stop Navigating using the Compass with inReach SE+ / Explorer+

Administrator - 2017-03-09 - 0 Comments - in How-To

The Compass is a tool used to assist with geographic direction. The compass features and appearance change depending on whether you are tracking or navigating to a destination.

This article explains how to stop navigating using the compass.

1. Select **Compass** and press 
2. Press  and the **Compass Menu** will be displayed.
3. Select **Stop Navigating** and press 